


Prepare some paper towels to wipe excess coolant liquid.

Since we don't have a Q210 detector in house, we had to set up a mockup for the photos.

First, remove the 3 flat head screws that secure the top panel (using a 2mm allen driver) in order to gain access to the quick connect fittings.

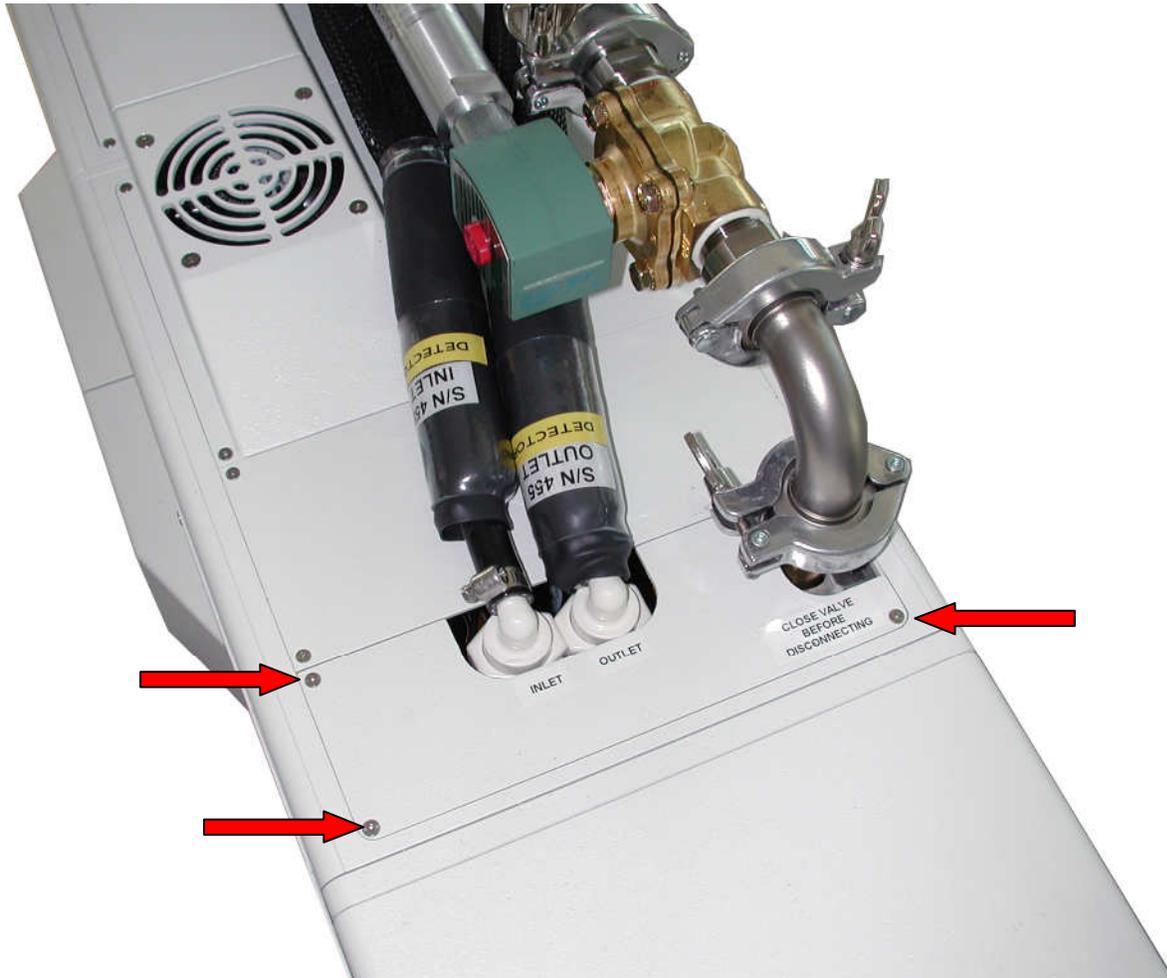

To remove the chiller hose, carefully push the button one at a time and pull up the hose as shown below.



Wipe any excess liquid from inside the quick connect as shown below.



Regarding the vacuum sensor (“Detector Thermocouple”), just give it a slight push downwards and rotate counterclockwise to remove the cable.

